 


USER MANUAL

Barumi®

barumiusa.com

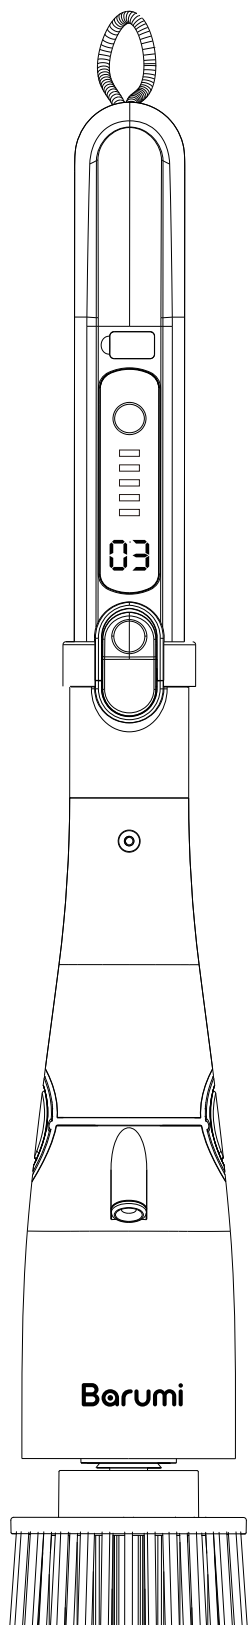

ELECTRIC SPIN SCRUBBER

MOTOR SPEED

300 • 400 • 500 RPM

ADJUSTABLE LENGTH

17.5" - 44.6"

ADJUSTABLE ANGLE

90° • 125° • 155° • 180°

Model: EF-SCB-01

Please read this manual carefully before using.

HOW TO USE


1. **Power On:** Press and hold the power button until the green light turns on. The scrubber will start at the slowest speed and the green indicator light will turn on.
2. **Change Speed:** Press the power button again to switch between different speeds.
3. **Turn on the Light:** At the highest speed, press the button once more to turn on the built-in light.
4. **Turn off:** To power off, press and hold the power button again.
5. **Low Battery:** If the speed noticeably slows down during use, this indicates low battery. You can also check the battery level on the display pane. Charge the device promptly.
6. **Charging:** The device cannot be used while charging. Please unplug the power cord before use.

PRODUCT PARAMETERS


1. **Material:** ABS
2. **Battery capacity:** 4000 mAh (removable and replaceable battery)
3. **Output power:** 45W
4. **Working voltage:** 7.4V
5. **Output current:** 0.3-5.5A
6. **Product speed:** 300, 400, 500 rpm (three speed digital display)
7. **Gear torque:** 28kg, 33kg, 35kg
8. **Rotation angle:** 90°, 120°, 150°, 180°
9. **Charging time:** approximately 3 hours
10. **Usage time:** 160 minutes (idle in slow mode)
11. **Charging voltage:** 5V/2A
12. **Product length:** 45cm, 90cm, 113cm
13. **Net weight of product:** 565g
14. **Product gross weight:** 1.4g (including packaging accessories, etc.)

BRUSH HEAD INSTALLATION AND REPLACEMENT


1. **Choose the Right Cleaning Tool:** Select the appropriate brush head or pad based on your cleaning needs. Ensure that the cleaning tool is securely installed before use.
2. **Install the Cleaning Tool:** Align the head's slot with the device's rotating shaft, then press it firmly until it clicks in the place.
3. **Replace the Cleaning Tool:** To replace, gently pull off the current heads and insert the new one by following the same align process.

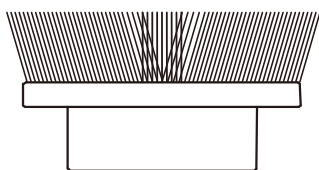


Big brush

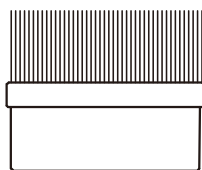


Small brush

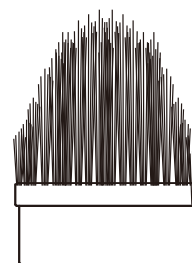


Pointed brush

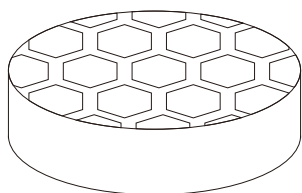 


Sponge brush

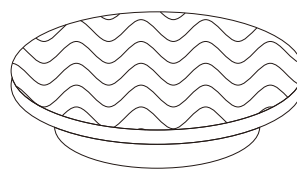 


Fabric brush

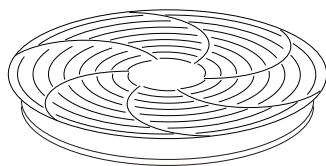 


Anti wool brush

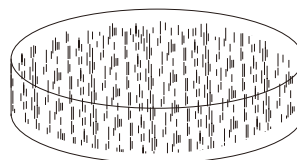 

Fiber brush

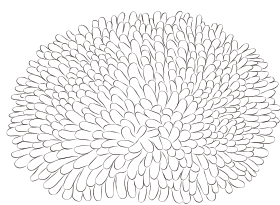 


Microfiber brush

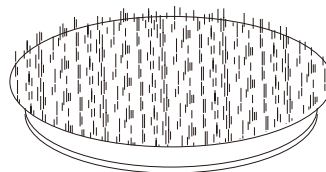 

Brush head bracket

 PRODUCT INTRODUCTION

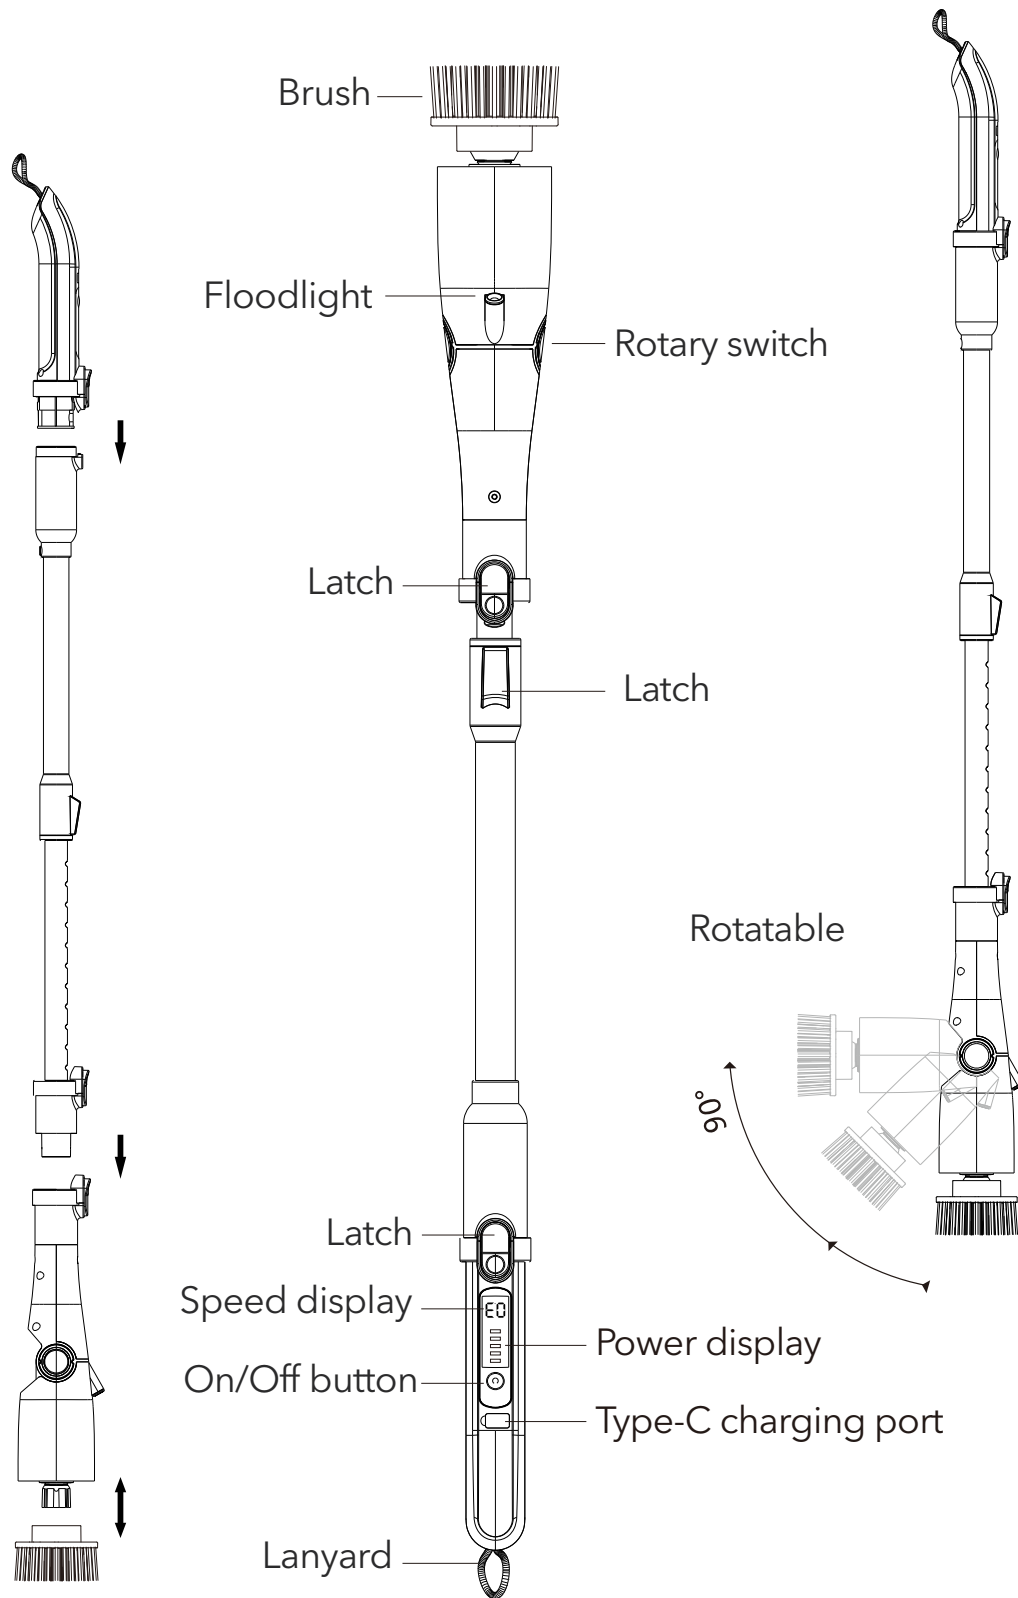

PRECAUTIONS

1. **Use the Correct Charger:** Only use the included USB charging cable. It can be connected to a phone charger (certified to GB4706.1 standards, 5V output), power bank, car USB port, or computer USB port.
2. **Supervise Children:** This product is not a toy. Children should only use it under adult supervision.
3. **Cleaning the Device:** Unplug the USB cable before cleaning. Use a damp soft cloth and a non-corrosive cleaner to wipe the product.
4. **Damaged Product:** If the product is damaged, stop using it immediately to avoid potential harm.
5. **No DIY Repairs:** Do not attempt to disassemble or repair the product yourself.
6. **Use the Right Cleaning Tool:** Select the appropriate brush head or pad for different cleaning tasks to avoid damaging surfaces.
7. **After Use:** Remove the brush head once the machine has fully stopped rotating.
8. **Avoid Excessive Pressure:** Do not press down hard on the brush head during use, as this may cause it to stop spinning.
9. **Clean After Use:** Rinse the brush head with water after each use to remove any stains or residue.
10. **Do Not Submerge:** Avoid immersing the device in water or other liquids.
11. **Avoid Hazardous Environments:** Do not use the product near flammable or explosive materials.
12. **Handle the Battery with Care:** The product contains a lithium battery. Do not attempt to open the casing, as this could cause battery damage or other dangers.
13. **Charging Safety:** Do not charge the product in a humid environment.
14. **Do Not Burn:** Do not burn the lithium battery or the product, as it may cause an explosion.